



 
Quick Installation Guide




Wireless expander/Repeater
M0304276 Version V1.0

1 The product description

1.1 This is a supplement of wireless LAN network, which could expand the scale of WIFI. It is useful, convenient and easy to install.

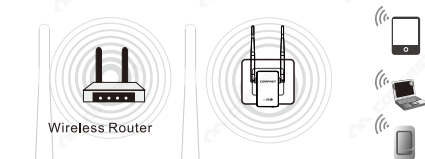

 1.2 Structure Description

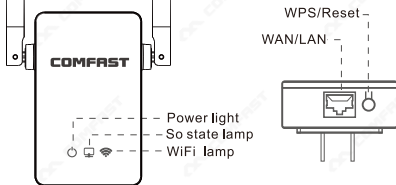

WPS/Reset: Press the button in 1-2 s to repeat automatically. Pressing the button for 10s could restore factory setting, the middle so-state lamp will flash for a while when restore successfully.



Warning

 
1. Unplug it in thunderstorm and prevent it from lighting damage.
2. Away from heat and keep ventilation.
3. Please pay attention to waterproof when storing, transporting and operating.

2 Product Installation

Notice: Notice: If the router has WPS button, you'd better choose the WPS "one key to repeater" to set up (See 2.1.1). If not, pls enter the IP address 192.168.10.1 to set up (See 2.2.1).

2.1 Press WPS on repeater and match automatically

2.1.1 Plug the wifi repeater on outlet near the wifi router. Press the WPS button on the main router for 1 - 2s. Then, press the WPS button on the repeater for 1 - 2s within 50s(ASAP). Wait for about 30s, the repeater will repeat automatically. The WIFI lamp will go out for a while and light up again when repeat successfully. Finally, a new extended WiFi named as "your original wifi name-Plus" will show on your wifi list. (eg: xxxxx-Plus)

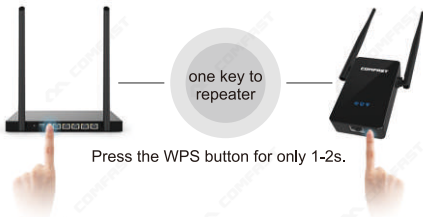

Press the WPS button for only 1-2s.

Pls make sure that it didn't repeat other router net when you press the WPS to repeat. Otherwise you will have to press the Reset button to restore factory settings.

Notice:

 
Please check the button on the router is the WPS or QSS.
Please check whether the WPS on the router is open(Enter the router interface to check).

2.2 Input IP Setting

2.2.1 Plug the wifi repeater on outlet. Connect the WiFi name of "COMFAST_xxxxxx" with your mobile.(cell phone or tablet)



2.2.2 Open browser, input 192.168.10.1, then get in ,and input user name and password "admin".

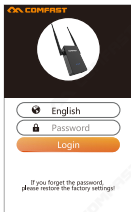

Transfer the default language Chinese to English, enter the default password "admin" and click the "Log In" to enter the setting page.

- ① Pls select a WIFI that you want to extend (If no Wifi signal available, please click Scan again)
- ② Pls enter WiFi password from your router and click connect. (Default the new WiFi name)
- ③ Extending successfully, pls wait 1 minutes to complete resetting and connect the WIFI again, you can surf the internet.



Description:

More function(eg: AP mode, router mode), pls set up with PC: connect it to the WAN port of the PC with the included internet cable and enter IP address 192.168.10.1 to website entry, you can access to the PC setting page.

3 Common Problems

Q: You cannot surf internet after setting up successfully?

A: Pls check the password whether is right. If not, pls enter the right password.

Q: The network speed is very slow after setting up successfully?

A: Pls enter the device status page to check whether the "Equipment and the main AP distance" is fit. If not, you can adjust the position of the repeater

How to check the status page: after connecting the extended WiFi successfully, you can enter the IP address 192.168.10.1 on mobile's browser or on PC to check the status of the repeater.

Note: Pls make sure that the IP address from upper network can't be 192.168.10.1

More questions, pls visit our main page:

www.szcomfast.com

Quick Installation Guide

Statement

**Shenzhen Four Seas Global Link Network
Technology CO.,Ltd.Company
all rights reserved.**

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network
Technology Co.,Ltd.Company
Address: Room 607-610,Block B Tao JINDI Electronic
Business Incubation Base, Tenglong Road, Longhua
District, Shenzhen, China
Hotline: 0755 83790059/83790659
Website: www.szcomfast.com

Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing a **COMFAST** products and service to protect your rights, please read the following maintenance regulations.

The following does not belong to free maintenance ,our company can provide paid service ,please note:

- Failure to require the installation manual , use ,maintenance, storage led to product failure or damage;
- Beyond the limited warranty , the warranty period;
Unauthorized alteration, tearing up the product bar code;
- Without authorization to change the settings file or inherent disassemble without authorization;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or oxidation product of serious,etc;
- Other non-product itself, design ,technology, manufacturing,quality and other quality problems caused by the failure damage.

Customer Data

Name	
Address	
Model	
MAC No.	
Machine unit sales	
Sale of machine address	
Date of sale machine	
TEL	
Post Code	
Invoice No.	

Certificate Of Qualification

Quality Inspector _____

Production Date _____

Executive Standard _____



YD/T 1965-2009